

Workbench Assembly – 2 inch top

Please Read Before Assembly!!

Visit www.gardenlarch.co.uk

Chris - 07988179838




Components

1. 2x end boards & legs (assembled)
2. 2x 6x1 x1.4m side boards drilled at 2 inch from ends.
3. 2x 6x1 x1.4m drilled at 5.5 inch from the ends – bottom boards.
4. 4 x 1.5m 50mm thick top boards pre assembled with coach bolts / screws
5. 2 inch screws
6. 4 x 3 inch L brackets and screws.

1. Place the 2 x end boards and legs approx 1.5m apart. Line the side boards to the edge of the legs, making sure they are square, and attach through the pre drilled holes, with the 2 inch screws.



2. Stand the chassis of the work bench upright. Now carefully lift the semi assembled top and align the 4x2 posts underneath with the edge of the legs.
3. When lowering the top of the table you may need to pull the side boards out a little to allow the table top to be located correctly.

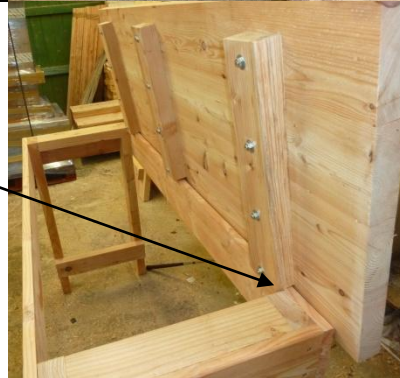

4. The top is a good fit, but for extra rigidity, attach the 4 L shaped brackets to each corner underneath the top, using the 40mm screws.
5. Now attach the bottom boards with the screws provided.



The workbench is complete. We hope you enjoy using it.



1.5m 50mm top



1.5m 25mm top